

Part #	Description	Quantity in Stock
106-4159	PIN	1
144-3373	SCREW	CALL
147-1323	SCREW	6
147-1359	SCREW	4
147-1360	SCREW	8
147-1362	SCREW	12
147-1363	SCREW	15
147-1475	SCREW	8
147-1487	SCREW	4
147-1492	SCREW	6
160-6063	SCREW	8
211-5293	HOLLOW HED. BOLT	1
246-5237	STUD	2
261-1111	NUT	2
266-1116	NUT	1
266-1117	NUT	8
277-1112	NUT	1
277-1313	NUT	2
301-2135	WASHERS	CALL
333-2115	WASHER	2
335-1120	CIR CLIP	CALL
335-1133-00	SNAP RING	2
338-3121	KEY	1
500-3172	BUSHING	CALL
502-1101	BEARING	CALL
502-1503	BEARING	CALL
502-1505	BEARING	CALL
582-0006	TUBE FITTING	3
582-0009	TUBE FITTING	2
582-0109	COUPLING	2
582-4006	COUPLING-TEE	0
582-4106		CALL
650-1226	GASKET	5
650-2111	GASKET	CALL
650-1292	GASKET	7
584-1002	RING (FERRULE)	24
653-0538	WASHER	CALL
653-0545	WASHER	1
653-1041	WASHER	10
653-1059	GASKET	CALL
653-1062	WASHER	2
653-1072	WASHER	1

Part #	Description	Quantity in Stock
653-4304	WASHER	CALL
653-7222	SHIM	16
653-7227	SHIM	CALL
654-2051	WASHER	CALL
654-2058	WASHER	0
654-2086	WASHER	0
654-8086	GASKET	1
661-1033	RING	CALL
661-1049	SEAL RING	1
661-1062	WASHER	CALL
663-2127	O'RING	CALL
663-2129	O'RING	1
663-3116	O'RING (UNABLE TO LOCATE	9
663-3126	O'RING	2
663-3132	O'RING	2
663-3537	O'RING	CALL
663-3830	O'RING	CALL
663-7155	O'RING	3
663-7534	O'RING	CALL
663-7540	O'RING	CALL
663-7572	O'RING	1
663-9869	O'RING	CALL
663-9873	O'RING	1
686-4702	LUG	1
830-3088	VALVE	CALL
830-5088	VALVE	CALL
878-1217	GAUGE	0
1000-1012		6
1000-1013		5
1000-3583-80	VALVE	CALL
1000-3584-80	VALVE	CALL
1000-3586	RETAINER	1
1000-4000-80	VALVE	0
1000-4002-80	SUCTION VALVE (CAN NOT LOCATE	1
1000-4004-80	EXHAUST VALVE (CAN NOT LOCATE	1
1000-4050		0
1000-4051	VALVE DISC	3
1000-4209	CLAW	0
1000-4212	CLAW	0
1000-4214	DIAPHGRAM	20
1000-4522	VALVE DISC SPRING	1
1000-5760	BUFFER DISC	3

Part #	Description	Quantity in Stock
1000-5761	BUFFER DISC	2
1000-7012	DISC	4
1000-7754	COVER	2
1000-7756	SEAT	2
1011-1327	JOINT	CALL
1012-0248-82	AUX. VALVE	CALL
1012-0356	FILTER SCREEN	1
1012-0538	SPRING	CALL
1030-0882	OIL FILTER	12
1030-0979	AIR FILTER	CALL
1030-1070	AIR FILTER	0
1090-0263	SPRING	CALL
1090-0360	SPRING	1
1090-0367	SPRING (0-125#)	1
1090-0535	SPRING	1
1090-0539	SPRING	CALL
1091-0296-03	SWITCH	CALL
1091-0339-81	VALVE	CALL
1091-0403	SWITCH	CALL
1091-2229-90	TOOL SET SEE API	CALL
1202-1422	GASKET	5
1404-1443	TUBE - BT-6	2
1404-1810	DIAPHRAGM	3
1500-3913	CRANKCASE	1
1500-3914	"CYLINDER, LP"	1
1500-3915	CYLINDER	CALL
1500-3916	"CYLINDER, LP"	1
1500-3919-71	COVER	1
1500-3920	END COWL	1
1500-3921	END COWL	1
1500-3935-80	INTERCOOLER	1
1500-3939	RING	CALL
1500-3950	COVER	2
1500-3951	VALVE COVER	1
1500-3952	RETAINER	1
1500-3953	RETAINER	2
1500-3959	GASKET	CALL
1500-3961	GASKET	1
1500-3962	GASKET	1
1500-4012	GASKET	2
1500-4014	AIR RELEASE PIPE	1
1500-4145	WASHER	CALL

Part #	Description	Quantity in Stock
1500-4149-71		1
1500-4160	COVER	CALL
1500-4193	VALVE CONE	CALL
1500-4198	SCREW	0
1500-4201	LOCK SCREW	0
1500-4202	LOCK SCREW	CALL
1500-4203-80	PIN	0
1500-4207-80	H.P. HEAD UNLOADER PIN	1
1500-4281-80	SAFETY VALVE	1
1500-4323		1
1500-6739	PLUG	CALL
1500-6808	VALVE	CALL
1501-1589-80	PISTON	1
1502-0548	FLYWEEL	1
1502-1576	COVER	CALL
1502-0577	CONTAINER	1
1502-0852	HEAD	CALL
1502-1116	UNL SET	CALL
1502-2546	RING	CALL
1502-2891	FLANGE	1
1502-2902	AIR FILTER	CALL
1502-2903	AIR FILTER	2
1502-4200	LOCK SCREW	0
1502-4203	SCREW	1
1502-4792	CONN PIPE	1
1612-0176	ELBOW	CALL
1612-0343-80	HOUSING	CALL
1612-1304	SUPPORT	CALL
1612-1306	SUPPORT	CALL
1612-1307	SUPPORT	CALL
1612-1308	SUPPORT	CALL
1612-1310	SUPPORT	CALL
1612-1311	SUPPORT	CALL
1612-1314	SUPPORT	CALL
1614-0141	INSERT	CALL
1614-0860	WASHER	CALL
1614-0861	WASHER	CALL
1614-0917	TOOL	CALL
1619-0106	SUPPORT NUT	2
1619-0108	SUPPORT SCREW	2
1619-0355	OIL FILTER	1
1619-1269	FILTER	0

Part #	Description	Quantity in Stock
1619-1613	ELEMENT	CALL
1619-1846	DIAPHRAGMS	CALL
1619-1973	BUFFERS	CALL
1619-1983	BUFFERS	CALL
1619-2678	ELEMENT	CALL
1619-2681	WASHER	1
1619-2684	CARTRIDGE	CALL
2004-0169	PACKING	2
2102-023	GASKET	1
2102-0035	SHAFT	CALL
2102-0108	GASKET	4
2102-0823	GASKET	1
2250-4138	GASKET	1
2250-4161-82	PUMP	CALL
2250-4163		CALL
2250-4164-80	GEAR	CALL
2250-4166	GASKET	CALL
2250-4191	DIAPHRAGM	CALL
2250-4440	GASKET	CALL
2250-4441	GASKET	CALL
2250-4485	GASKET	1
2250-5303	DIAPHRAGM	CALL
3083-3008	MOIL POINT	CALL
3083-3009	CHISEL	CALL
3083-3040		CALL
3161-0388	SCREW	CALL
3310-0268	PIN	1
3510-0159	VALVE SEAT	1
3510-0200	HOLDER	CALL
4023-0666	PHILLIPS	CALL
4023-0668	BIT	CALL
4023-0701	BIT	CALL
4023-0707	FINDER	CALL
4023-1197	REL. CHUCK	CALL
4080-0180-80	WRENCH	CALL
4090-0105-01	SCREW	CALL
4110-0863	GEAR WHEEL	CALL
4110-0866-82	PLANET GEAR	CALL
4110-0873	CUP SPRING	CALL
4110-0875	GEAR PIN	CALL
4250-0743	TRIGGER SEE 4250-1162.80	CALL
4250-0767	SPRING	1

Part #	Description	Quantity in Stock
4250-0782	SPRING	5
4250-0783	ROTOR	CALL
4250-0784	PLUG	2
4250-0785	VANES	6
4250-0786	CYLINDER	CALL
4250-0787	PLATE	CALL
4250-0790	SPRING	6
4250-0876	VALVE	CALL
4250-0883	RETAINER	14
4250-1162-80	TRIGGER ASSY	3
4510-0002	GUIDE	1
4510-0011	GASKET	CALL
4510-0012	OIL RESV.	CALL
4510-0016	GASKET	CALL
4510-0034	PAD	CALL
4510-0043	GASKET	CALL
4510-0045	GASKET	CALL
4510-0060	SCREW	CALL
8928-75-07102		1
9710-0110-02	FILTER	CALL
9710-0275-02	FILTER	1
9710-0405	FILTER	CALL
9710-0645-03	VALVE	CALL
9710-0802	STEP PANEL	CALL
9710-1147-01	ASCO 3 WAY SOLENOID VALVE	CALL